



B100

User manual

Basic instructions

Powering On and first pairing

The case with earbuds needs to be fully charged before first use.

Take the left and then the right earbud out of the charging case. In 5 seconds, one earbud starts flashing red / blue. The second earbud will not flash. Turn on the cellphone Bluetooth function and search for "B100". Select this item and confirm pairing. When the connection is successful, both LEDs on the earbuds go off.

Powering Off

Put both earbuds back into the charging case or press and hold the two headset touch keys for 3~5 seconds.

Reconnecting to your phone

Turn on the Bluetooth function of the phone, take out both earbuds from the charging case and they will reconnect automatically.

Using the touch buttons

Pause / Resume playback

Short press the touch button during playback to switch Play / Pause.

Next track

Double-click the touch button during playback to skip to the next song.

1

Previous track

Triple-click the touch button during playback to skip to the previous track.

Answer / Terminate call

On incoming call / call in progress, short press the touch button to answer / terminate the call.

Reject the call

On incoming call, press and hold the touch button for 1.5 seconds to reject the call.

Voice assistant

Press and hold the touch button for 1.5 seconds during standby to activate the voice assistant (requires mobile phone support).

Charging

Charging the earbuds

Put the earbuds into the charging case. LED will be solid red while charging and turns blue / off when the earbuds are fully charged.

2

Charging the case

Use the micro USB charging cable and plug it in the micro USB port of the charging box. The digital number flashes during charging and will stay on after the battery is fully charged (displaying "100").

Specification

Bluetooth version: V5.0

supporting agreement: A2DP, AVRCP, HFP, HSP

Frequency Range: 2.402GHz~2.480GHz ISM Band

Signal distance: > 10M

FAQ

How do I restore the factory settings?

If the left and right earbud are not connected correctly, you can perform the factory reset operation. While the headphones are turned off, press and hold the left and right touch button for 10 seconds (both LED indicators the red and blue indicators of the headphones flash together, and then hit the two headphones. Touch button, the factory settings have been restored. Then put the two headphones together, after a few seconds, the left and right ears can re-establish the connection. (Please perform the factory reset operation on both headphones, otherwise the left and right ears will not be connected.)

3

Sound comes only from a single earphone?

Generally, it is because only one earphone is connected, and it can be solved after rebooting or restoring the factory settings.

How do I know, if the earbuds are fully charged?

There is a specific indication in the charging box: active bars, bars or all off. You can check the charging status by taking the earbuds out and putting them back into the charging case.

К_ \ Z_Xi ^ e ^ Yf o ZXef kZ_Xi ^ \ k_ \ \ X(g_ f e \)
: f ee \ Zk k_ \ Z_Xi ^ e ^ Zj \ k' X e L J 9 Z_Xi ^ \ i n X k_ \ L J 9
Z_Xi ^ e ^ ZXY d .
□

Precautions

- Please use this product while you are safe.
2. Please do not discard the product in fire or high temperature, because the built-in battery is easy to cause an explosion.
3. Please do not perform barbaric operations on the product, such as beatings, collisions, etc.
4. Please use the original accessories, accidents caused by the use of other accessories, will not be covered by the warranty.
5. Please use the DC5V/1A charger to charge the charging box to avoid damage to the product.

4